

Drag and Drop Instructions for D-11

8/8/07

1. Open Email software and select the email from your Dealer and locate the attached MP3 audio file..





2. Insert the DL-11 USB Flash Drive into a USB port on your computer.



- 3- Right "Click" on the attached MP3 file on the email.
- 4- Select "SAVE AS" from the menu.



5- When "SAVE ATTACHMENT" Window appears, select the "SAVE IN:" box and navigate to the USB Flash Drive. It is usually labeled "REMOVABLE DRIVE". If you see the file POHU.POD, you have the correct drive selected.



6- Right "Click" on the older MP3 file in the main window, and select "DELETE".

Save Attachment								
Save in:	🖙 Removable Disk (U:)				X	🍟 🎫 🝷	Too <u>l</u> s +	
Ò	Generic.r	Select						
My Recent Documents		<u>O</u> pen <u>P</u> lay						
Desktop		Add to <u>Wi</u> ndows Media Player list Play with Windows Media Player Scan with <u>A</u> VG Free Open With	•					
	-	Send To	•					
My Documents		Cu <u>t</u> <u>C</u> opy						
		Create Shortcut						
My Computer		Delete Rena <u>m</u> e						
Mu Nebuerk	File <u>n</u> ame:	Properties				~		ave
Places	Save as <u>t</u> ype:	All Files (*.*)				~		ancel

7- Select "SAVE" on the "SAVE ATTACHMENT" window.



8- On the bottom tool bar on your Desktop, select the "SAFELY REMOVE HARDWARE" icon (green arrow), then click on Safely Remove USB Mass Storage Device.

9- Remove USB Flash drive and re-insert it back in the DL-11. That's it!

